

Intuitive Frame (IT Leg)



Step 1:
Place crossbar over C-bracket



Step 2: Line up holes and screw fasteners to top and bottom of each side of frame.

All-Terrain & A&D Adjustable leg (AT & AND Leg) *Skip Step 1&2*



Step 3: Align slots on legs with metal insert holes in tops and tighten screws. Flip over table and enjoy years of use.

Please Note:
Power tools are not recommended due to over torquing of hardware

Adjusting Height

Remove 3/16" Set-Screw with #2 Phillips Bit



Slide Out Leg Lower



Take off Bezels



Place Bezel at Desired Height & Replace 3/16" Phillip head Set-Screw



Tools: Phillips Bit

Hardware : 10-32 x 3/4 (use for work surface attachment) & 10-32x 3/16 (use for adjusting height of leg lower)

Height Settings

it leg top height	23.5"	24.5"	25.5"	26.5	27.5"	28.5"	29.5"	30.5"	31.5"	32.5"	33.5"	34.5"
AT leg top height	24.5"	25.5"	26.5	27.5"	28.5"	29.5"	30.5"	31.5"	32.5"	33.5"	34.5"	35.5"
A&D leg top height	24.5"	25.5"	26.5	27.5"	28.5"	29.5"	30.5"	31.5"	32.5"	33.5"	34.5"	35.5"
# of holes showing	0	1	2	3	4	5	6	7	8	9	10	11