
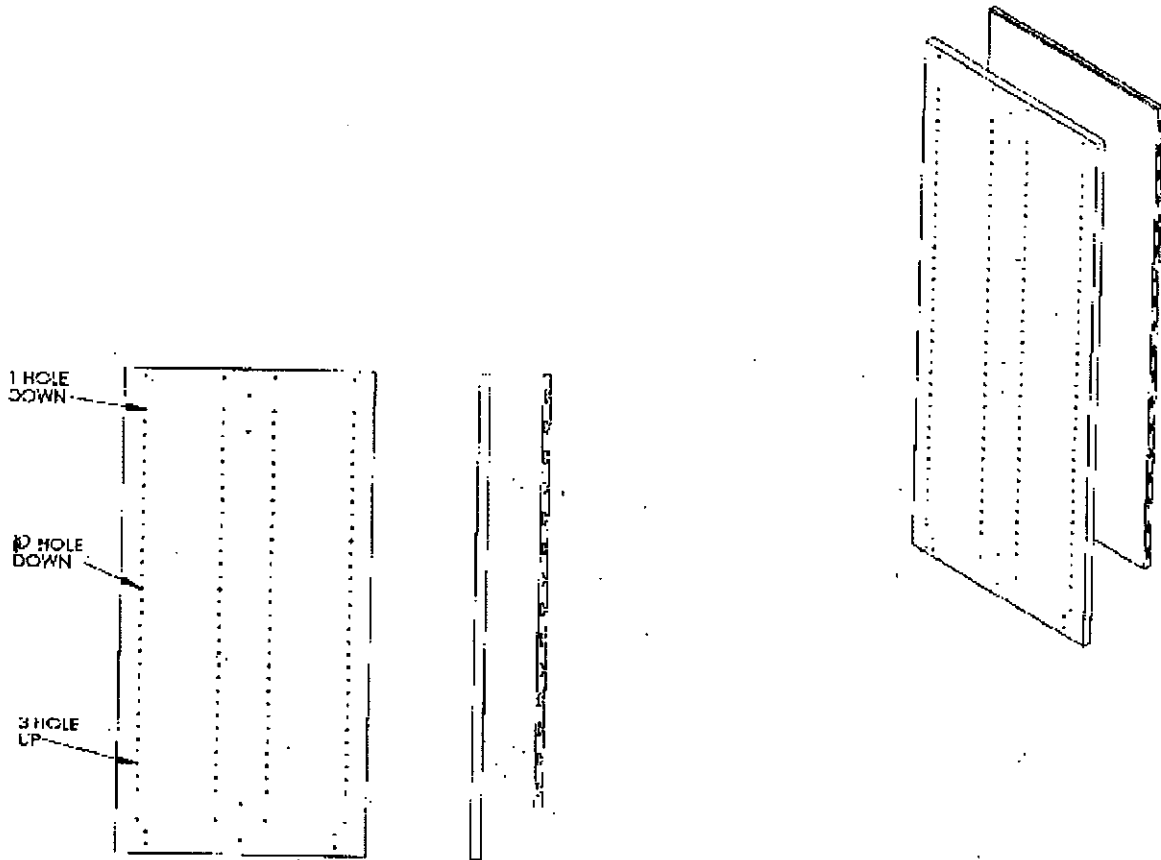


ASSEMBLY INSTRUCTIONS: SLAT WALL (SW)



HARDWARE			
	QUANTITY	PART NUMBER	DESCRIPTION
	6	10105894	#8-1 1/2" FLAT HEAD SCREW

OTHER TOOLS REQUIRED: 3/16" DRILL BIT, CORDLESS DRILL, AND PHILLIPS HEAD BIT

INSTRUCTIONS

1. Drill through holes noted on the drawing using 3/16" drill bit.
2. Have one person hold the slat wall panel in place. The top edge should be flush with the top of the bookcase and centered left to right.
3. Attach panel using #8-1 1/2" flat head screws.